

# HOW TO MEASURE



## Outside fitting

Measure outside frame to frame left to right (mm) as illustrated above a.


Measure outside frame to frame top to bottom (mm) as illustrated above b.

Overhang with an outside fitted blind you decide how much larger than the window frame you want the size of the blind to be.

A good example is to add 100(mm) to the width and 300(mm) to the length this means you fit the blind approximately 200(mm) above the frame whilst allowing it hang 100(mm) below the frame



A Roman Blind fitted outside your window frame measures between 250-300mm when pulled up or fully open. Take this into account when finalising your length measurements.

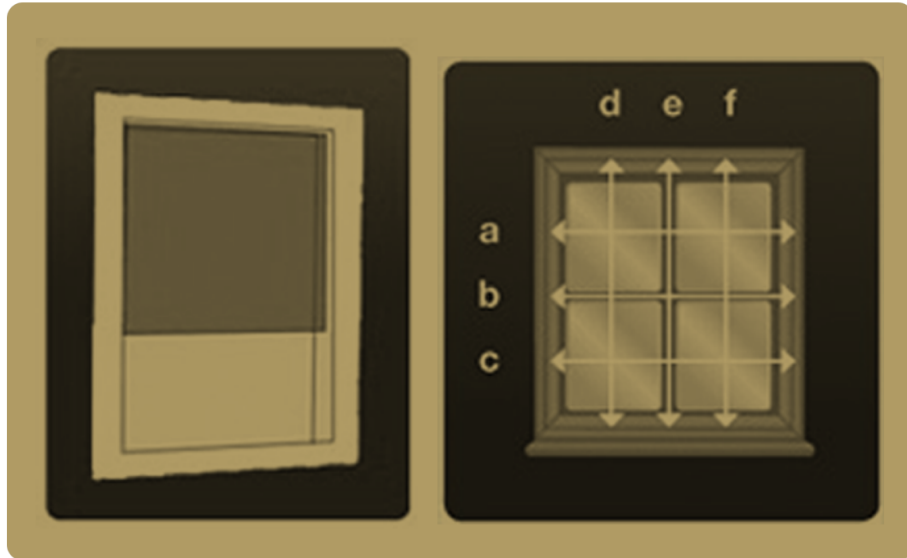

## Inside fitting

Measure inside frame to frame left to right (mm) in three separate places as illustrated above a.b.c.

Measure inside frame to frame top to bottom (mm) in three separate place as illustrated above d.e.f.

Enter the smallest measurement of 3 for both the width and length of your blind. DO NOT make any deductions from these inside frame measurements.



A Roman Blind fitted inside your window frame will permanently cover between 250-300mm when pulled up or fully open and it will affect the amount of light coming through the window