


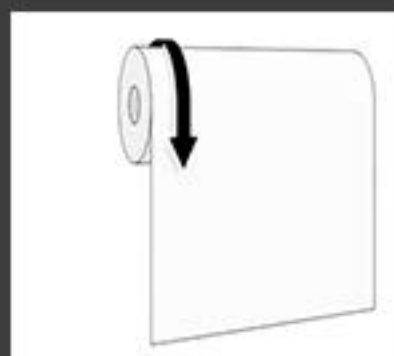

### Backward Roll - Standard

The fabric will roll backwards coming off the tube closer to the window. This roll is suitable for blackout and sunfilter fabrics.



### Forward Roll - Reverse

The fabric will roll forwards coming off the tube further away from the window. **Thermal Coated Fabrics** must be rolled forwards.

This roll is suitable for blackout and sunfilter fabrics.